

MANUALBIG ENEGRY ROOF BAR

850160: 600MM ROOF BAR

RED: + VDC BLACK: - GROUND

YELLOW: Flash pattern selection (Apply Yellow wire to +VDC)

*Less than 1s =For next pattern *1s-3s =For previous pattern

*Over 5s=For low power, 5s again back to high power

WHITE: Synchronization (Connect white wires of two heads together for

synchronization) MAX 2pcs

GREY: Steady on (Constantly connect to red wire achieve it)

850161-850164: 900MM-1800MM ROOF BAR

RED: + VDC BLACK: - GROUND

YELLOW: Flash pattern selection (Apply Yellow wire to +VDC)

*Less than 1s =For next pattern *1s-3s =For previous pattern


*Over 5s =For low power, 5s again back to high power

WHITE: Synchronization (Connect white wires of two heads together for

synchronization) MAX 2pcs

BLUE: Steady on, (Constantly connect to red wire achieve it).

BROWN (optional cable): Right arrow (Apply to red wire constantly) **GREEN (optional cable):** Left arrow (Apply to red wire constantly)

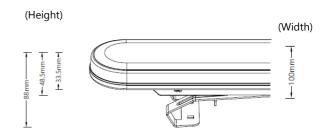

(600mm,900mm,1200mm,1500mm,1800mm length)

| Flash patterns: | | | |
|-----------------|-------------------------------|----|--|
| 1 | Single flash (ECE R65) | 15 | Right constant flash |
| 2 | Double flash (ECE R65) | 16 | Left constant flash |
| 3 | Triple flash (ECE R65) | 17 | Middle to side constant flash |
| 4 | Quad flash (ECE R65) | 18 | One - one eight flash (fast) |
| 5 | Single flash (Slow) | 19 | One - one single flash |
| 6 | Single half to half (ECE R65) | 20 | One - one single flash - Split accelerate |
| 7 | Double half to half (ECE R65) | 21 | Center - out quad flash |
| 8 | Triple half to half (ECE R65) | 22 | Center - out single flash (split accelerate) |
| 9 | Quad half to half (ECE R65) | 23 | End octa flash- Half to half |
| 10 | Half to half + All | 24 | Out - steady on,Center - double flash |
| 11 | Single flash + Quad flash | 25 | One - steady on,one - single flash |
| 12 | Right arrowstick | 26 | Cycle (#6, 19, 9, 18, 21, 2) |
| 13 | Left arrowstick | 27 | Steady on |
| 14 | Middle to side arrowstick | / | |
| | | | |

Part no. 850160,850161,850162,850163,850164,850160C,850161C,850162C,850163C,850164C

Contact us if you need support: support@strands.se or +46(0)320-450450





READ THIS BEFORE INSTALLATION

READ ALL INSTRUCTIONS AND STUDY DIAGRAMS BEFORE INSTALLING YOUR NEW LIGHTS!

LEGAL MOUNTING

Check with state or local authorities for laws governing usage and proper mounting of your new lights.

TAKE CARE OF YOUR PRODUCT

Keep the product clean. Dirt on the lens and heat-sink may shorten the products lifetime.

We recommend using lukewarm water and alkaline degreasing.

Follow the degreasing instructions carefully and rinse off gently with cold or lukewarm water on low pressure.

WARNING!

Strong chemicals should not be used on the product. If you accidently get strong chemicals on the product, rinse off immediately, use plenty of water so that no chemicals remain in any joint.

Some chemicals have a small amount of solvent in them, this can dissolve sealing adhesives and compromise the product's waterproofness.

Some chemicals pull out liquid from plastic and rubber-based components, which makes the plastic or rubber brittle and bursts more easily.

Be careful not to use high water pressure close up on the product.

If you use high water pressure at short distances, most products find it difficult to close out the water.

INSTALLATION

If there is a contact/connector on the product, it should not be cutted. If the connector is cut, the warranty is not valid.

If the product has loose cable and no connector. If the cable is shorter than 50 cm, the cable must not be cutted. If the cable is cut, the warranty is not valid

If the cable is longer than 50 cm, it is ok to shorten the cable, but not shorter than 50 cm.

If the cable is cut shorter than 50 cm, the warranty is not valid.

Tighten screws and bolts so that they do not loosen or chafe.

Do not tighten screws so hard that the protective bearings on the product breaks.

WARNING!

Do not use higher volts than the product description states.

This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.



